

00\_00\_0000\_00\_00 0000 00 0000 0 0000 00000 0 00000, 00000 00 0000 00 000000 0000 000000 0000 00  
 0000 000000 0000 0000 0000 0000 00000. 00000 0000 00 00 00 00000 00 000000. 00 00, 00 0000 00000 00000.  
 00 0000 0 0000 00 000000 00000 0000 0 00, 00000, 00 00 0 00 0000 00000. 00000 00 0 00 0000 0 000000 00000 00  
 00000 00000. 00 00000 00000 0000 0 0000000 00000. 00 00 0000 00 000000 0000 0000 000000 00000.

0000 0000 00, 0, 00, 00, 00, 00 00 0000 00000 00000 0000 0000 0 0 0000 0 00000. 00 00 00 0 00 0000 0 00 0000 00  
 00 0000 00 0000000 00 0000 00 00 0000 00 00 0000 000000 00000. 00 0000\_0\_00 manufacturer. 0000 0000 0000  
 00.



0000 0000 00. 00 0000 00 0000 000000.

Gray 1#

Gray 2#

Gray 3#

Gray 4#

Gray 5#

Gray 6#

Gray 7#

Gray 8#

Gray 9#

Cement Gray

Dull Gray

Silver Gray

Metal Gray

Luxury Silver

Glacier White

Calaeatta

Pearl Gold

Slate Gray

Terra Brown

Greyish Green

Yellow Gray

Soft Khaki

Yellowish Brown


Olive Brown

Brownness

Dark Brown

Reddish Brown

Rock Bslack

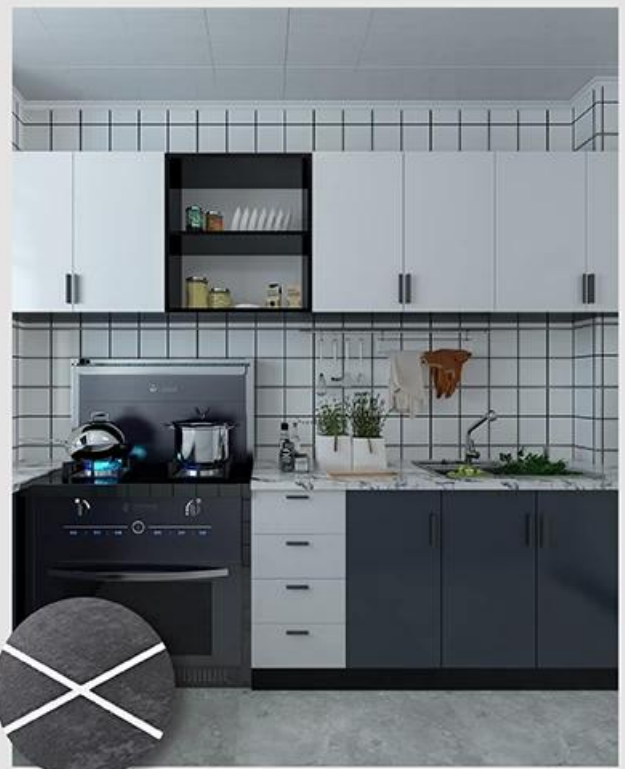

□□ □ □ □□□ □□□□□







01 Clean the tiles and keep it dry



02 Polish with tile wax except the glazed tile



03 Open & Watch, both sides can extruded meanwhile



04 Screw on the nozzle, put on the grout gun



05 Inclined cut the top of the nozzle in 45°



06 Squeeze out 60-80cm long grout in the forepart



07 Evenly squeeze out the tile agent along the gap



08 Press the grout with professional glue-press tools



09 Don't touch in 4-5 hours and remove excess grout then.



10 Keep the tiles dry in 24 hours

□□ □□ □□ □□



Two Component Caulking Gun



02 Cutter Knife



03 Pointing trowel



04 Brush



05 Forming Stick



06 Pointing Knife



07 Masking Tape



08 Stainless Steel Ball



09 Cleaning Awl

□□ □□



□□ □□



Creaming Machine Line



Testing Machine



Batching Production Line



Cooling Filling



Filling Machine Line



Film-coated Machine



Real Material Stock



Stock

□□

