

000 00 00000 00 0 000 000 00 000000 000 000000. 000 000 00, 0, 00, 00, 00, 00 00 000 000000 000 00, 0, 00, 0000 000 0000 0 0 000 0 00000. 000 000 0 00, 00 000 000, 000 00 0 000000 00000. 000 000 00 00, 00 00, 00 000 0 0 00 0 0 0000, 000 00000 00 00 00 000 000000. 0 000 00 000 00 000 000000 00000 00, 000 00 0 000, 00 00 000 00 00000. Kelin-A 00 00 00 000 0 00 00 00.



000 000 00. 00 000 00 000 000000.



□□ □ □ □□□□ □□□□□□





01 Clean the tiles and keep it dry



02 Polish with tile wax except the glazed tile



03 Open & Watch, both sides can extruded meanwhile



04 Screw on the nozzle, put on the grout gun



05 Inclined cut the top of the nozzle in 45°



06 Squeeze out 60-80cm long grout in the forepart




07 Evenly squeeze out the tile agent along the gap



08 Press the grout with professional glue-press tools



09 Don't touch in 4-5 hours and remove excess grout then.

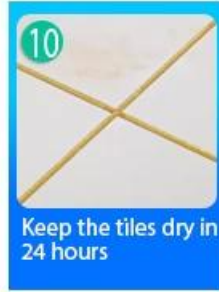

10 Keep the tiles dry in 24 hours

□□ □□ □□ □□



Two Component Caulking Gun



Cutter Knife



Pointing trowel



Brush



Forming Stick



Perching Knife



Masking Tape



Stainless Steel Ball



Cleaning Awl

□□ □□



□□ □□

✘	✘	✘	✘
□□ □□ □□	□□□ □□□	□□ □□ □□	□□ □□□
✘	✘	✘	✘
□□ □□ □□	□□ □□□	□□ □□ □□	□□

□□

