

Kelin Waterborne 是種 環保 的 瓷 磚 膠。 它 能 讓 您 的 瓷 磚 鋪 設 工 程 更 為 簡 便 和 安 全。 這 種 膠 水 能 與 各 種 瓷 磚 材 質 相 容， 且 能 在 鋪 設 後 形 成 一 層 堅 固 的 保 護 層。 它 能 有 效 防 止 水 分 滲 透， 保 護 牆 體 和 地 面 的 結 構。 此 外， 它 還 具 有 優 異 的 粘 合 力， 能 確 保 瓷 磚 長 久 不 動。 請 認 準 商 標， 以 免 誤 購 其 他 類 似 產 品。

此 膠 水 適 用 於 各 種 瓷 磚 鋪 設， 包 括 牆 面 和 地 面。 它 能 與 各 種 瓷 磚 材 質 相 容， 且 能 在 鋪 設 後 形 成 一 層 堅 固 的 保 護 層。 請 認 準 商 標， 以 免 誤 購 其 他 類 似 產 品。 請 認 準 商 標 - [www.kelin.com.hk](#) 。



請 認 準 商 標。 請 認 準 商 標 以 免 誤 購。







01 Clean the tiles and keep it dry



02 Polish with tile wax except the glazed tile



03 Open & Watch, both sides can extruded meanwhile



04 Screw on the nozzle, put on the grout gun



05 Inclined cut the top of the nozzle in 45°



06 Squeeze out 60-80cm long grout in the forefront



07 Evenly squeeze out the tile agent along the gap



08 Press the grout with professional glue-press tools



09 Don't touch in 4-5 hours and remove excess grout then.



10 Keep the tiles dry in 24 hours

□□ □□ □□ □□



01 Cutter Knife



02 Pointing trowel



03 Brush



04 Rainbow Scraper



05 Stirring Knife




06 The sponge



07 Scouring Pad

□□ □□

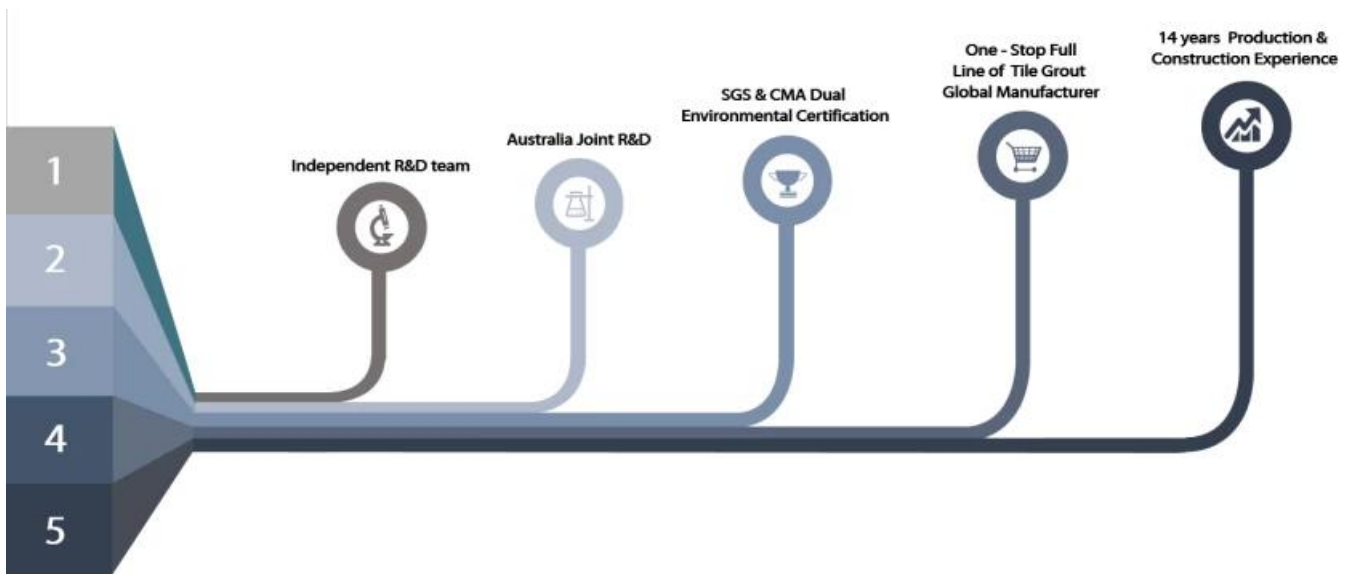

□□ □□



Creaming Machine Line



Testing Machine



Batching Production Line



Cooling Filling



Filling Machine Line



Film-coated Machine



Real Material Stock



Stock

□□

