

Kelin Waterborne 是種 環保 的 瓷 磚 膠 水。 這 種 膠 水 能 夠 為 瓷 磚 鋪 貼 提 供 最 佳 的 粘 合 力。 這 種 膠 水 能 夠 為 瓷 磚 鋪 貼 提 供 最 佳 的 粘 合 力。 這 種 膠 水 能 夠 為 瓷 磚 鋪 貼 提 供 最 佳 的 粘 合 力。 這 種 膠 水 能 夠 為 瓷 磚 鋪 貼 提 供 最 佳 的 粘 合 力。

這 種 膠 水 可 以 用 於 鋪 貼 各 種 瓷 磚， 如 地 磚， 牆 磚， 衛 浴 瓷 磚 等。 這 種 膠 水 能 夠 為 瓷 磚 鋪 貼 提 供 最 佳 的 粘 合 力。 這 種 膠 水 能 夠 為 瓷 磚 鋪 貼 提 供 最 佳 的 粘 合 力。 這 種 膠 水 能 夠 為 瓷 磚 鋪 貼 提 供 最 佳 的 粘 合 力。 這 種 膠 水 能 夠 為 瓷 磚 鋪 貼 提 供 最 佳 的 粘 合 力。



這 種 膠 水 可 以 用 於 鋪 貼 各 種 瓷 磚。

Gray 1#

Gray 2#

Gray 3#

Gray 4#

Gray 5#

Gray 6#

Gray 7#

Gray 8#

Gray 9#

Cement Gray

Dull Gray

Silver Gray

Metal Gray

Luxury Silver

Glacier White

Calaeatta

Pearl Gold

Slate Gray

Terra Brown

Greyish Green

Yellow Gray

Soft Khaki

Yellowish Brown

Olive Brown

Brownness

Dark Brown

Reddish Brown

Rock Bslack



□□ □ □ □□□□ □□□□□□





01 Clean the tiles and keep it dry



02 Polish with tile wax except the glazed tile



03 Open & Watch, both sides can extruded meanwhile



04 Screw on the nozzle, put on the grout gun



05 Inclined cut the top of the nozzle in 45°



06 Squeeze out 60-80cm long grout in the forepart



07 Evenly squeeze out the tile agent along the gap



08 Press the grout with professional glue-press tools



09 Don't touch in 4-5 hours and remove excess grout then.



10 Keep the tiles dry in 24 hours

□□ □□ □□ □□



01 Cutter Knife



02 Pointing trowel



03 Brush



04 Rainbow Scraper



05 Stirring Knife




06 The sponge



07 Scouring Pad

□□ □□

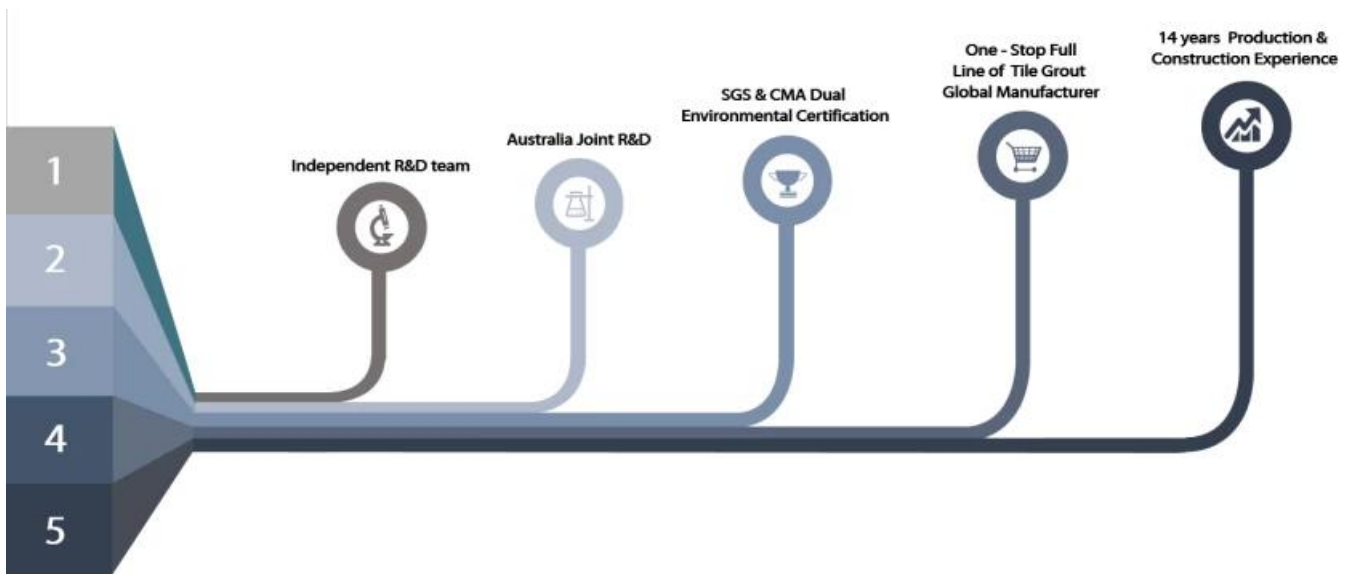

□□ □□



Creaming Machine Line



Testing Machine



Batching Production Line



Cooling Filling



Filling Machine Line



Film-coated Machine



Real Material Stock



Stock

□□

